


# USER MANUAL

Including: simulator\*1, USB extension line\*1, DVD\*2, 3.5mm audio cable\*1, servo line\*3, manual\*1

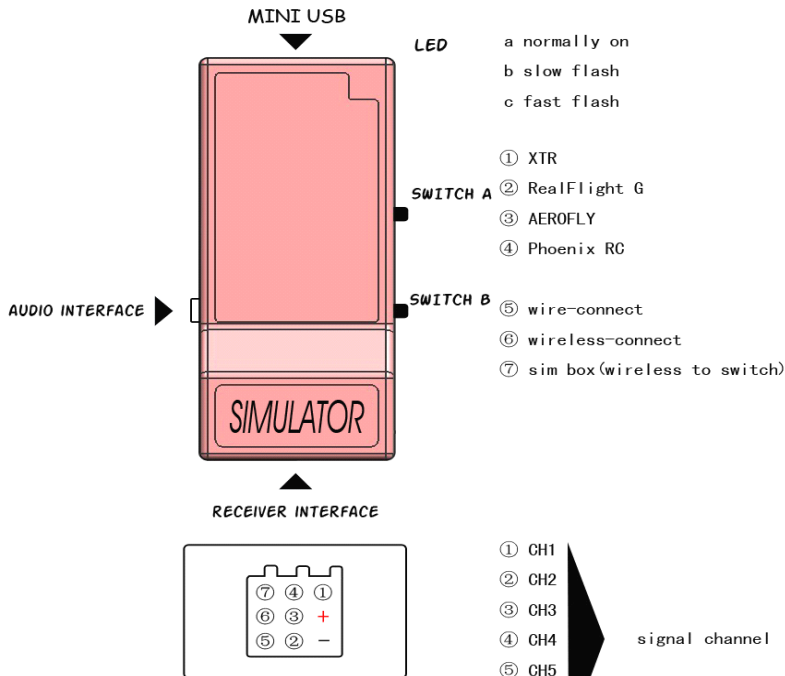

As shown above:

1-7 are for receiver channel insert.

simulator divide into 1(channel 1) line color is white, red and black.

Simulator divide into three(Correspond to each signal channel) line color is brown, red and yellow.




If the receiver channel less than 7ch, just leave the extra channel, for instance, 4 channel only need to connect Channel 1~4.

LED normally on: connect computer only, other devices are not all connect or improper connecting.

LED slow flash/fast flash: All devices are proper connecting.

You need re-connect with computer once you changed the switch A and B's position.

When you use wire connect for simulator, please set your transmitter output be PPM. Wireless mode and wireless to switch mode, transmitter must close all Mixed control(Helicopter mode:Swash plate please choose the traditional 90°).

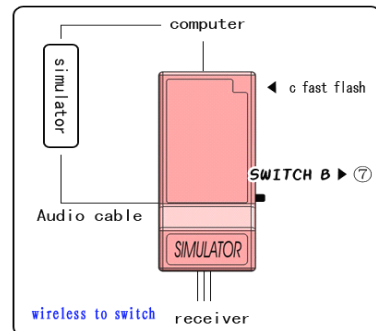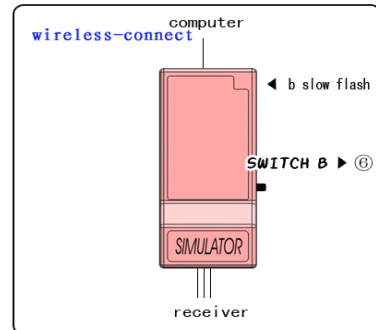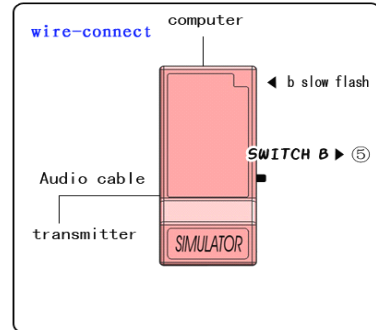

wireless-connect:

sim box(wireless to switch):

