


## 2.4G Remote Control

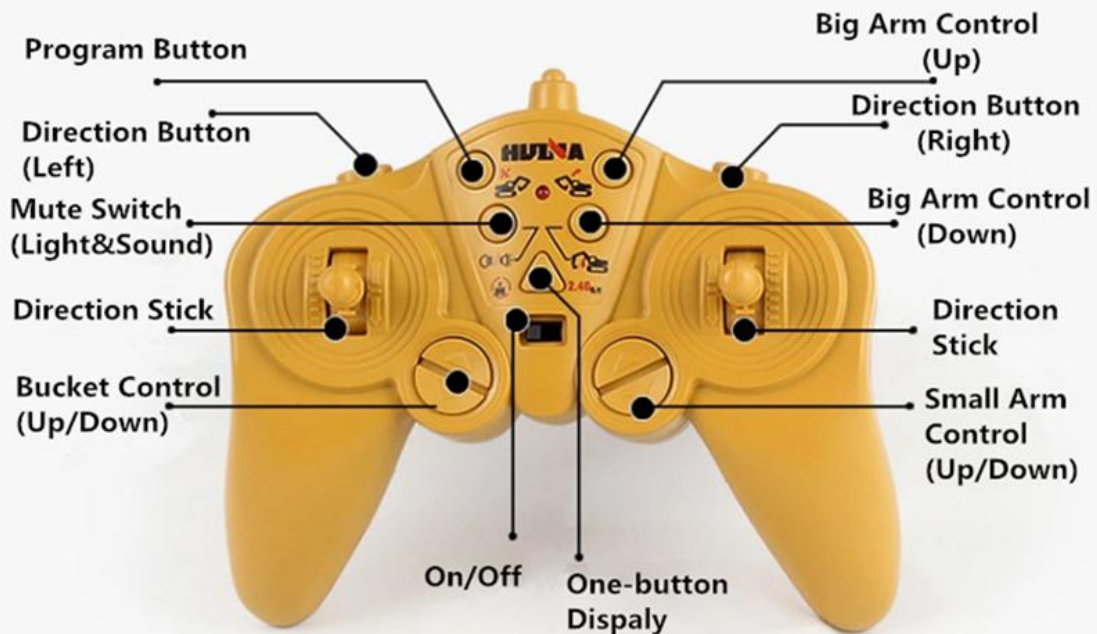

### Program Button:

1. press the button about 3 seconds to enter into program mode, and follow each function of the excavator to operate, then press the button again, now the program mode is finished.
2. After finishing program mode, press the button to start the program mode
3. Press any one of buttons to clear the program mode

### Direction Stick:

1. the stick moves forward, the excavator goes forward; the stick moves backward, the excavator goes backward
2. left stick moves forward, right stick moves backward, the excavator turn right
3. left stick moves backward, right stick moves forward, the excavator turn left