



- 值是在 00 至 29 之间，分数值则保持不变。
- 在设置“秒”时，若秒数值于 30 至 59 之间，在秒数值回到 00 的同时，分数值亦会增加 1；若秒数值是在 00 至 29 之间，分数值则保持不变。
  - 在设置“分”时，若分数值于 00 至 59 之间，在分数值回到 00 的同时，时数值亦会增加 1；若分数值是在 00 至 59 之间，时数值则保持不变。
  - 在设置“时”时，按 D 键调至“A”或“P”出现时为 12 时制，“H”出现时为 24 时制。
  - 在进入“分”、“月”、“日”、“星期”的调整，在对应元素闪烁时，按 D 键进行调整。
  - 在时钟设置模式下，“秒”闪烁，按 C 键“时”闪烁，按 C 键“分”闪烁，再按 C 键“时”闪烁，按 D 键调整“秒”归零；按 C 键“时”闪烁，按 D 键调整“分”归零；按 C 键“时”闪烁，按 D 键调整“秒”归零；按 C 键“时”闪烁，按 D 键调整“分”归零。
- 4. 时间设置功能**
- 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
  - D 键进行调整，再按 C 键设置完毕。
  - 闹钟设置：在闹钟模式下，按 C 键“时”闪烁，按 D 键进行调整，再按 C 键“分”闪烁，按 D 键进行调整，再按 C 键设置完毕。
  - 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
- 3. 闹钟及整点报时关闭与开启**
- 闹钟及整点报时关闭与开启：在闹钟模式下，“时”或“分”不闪烁，按 D 键是依次开启/关闭闹钟；及整点报时：( ) 会闪烁，响铃 20 秒后自动停止。
  - 闹钟设置：在闹钟模式下，按 C 键“时”闪烁，按 D 键进行调整，再按 C 键“分”闪烁，按 D 键进行调整，再按 C 键设置完毕。
  - 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
- 2. 秒表及分段计时功能**
- 在秒表模式下，按一次 D 键开始执行跑秒，再按一次 D 键跑秒停止，在跑秒停止时按 C 键是跑秒归零。
  - 在秒表模式下，按 D 键开始计时，按 C 键进入分段计时状态，有“SP”符号”) 开始中途测量。之后按 C 键开始计时，即记录第一位选手完成时间，再按 D 键中途测量完毕，记录第二位选手的完成时间，最后按 C 键清除记录。
- 1. 在非设置模式下，按 B 键选择操作模式。任意模式下按 A 或 E 键 EL 亮三秒。**

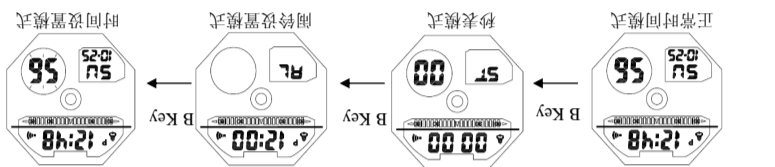

**B. 产品功能模式**

- 12 位计功能，显示时、分、秒、日、月、星期。
- 响铃及整点报时
- 贪睡功能
- 12/24 时制选择，全自动日历。
- 1/100 秒秒表
- EL 背光


**A. 功能简介**

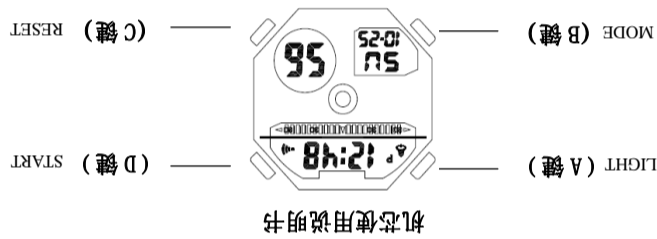

**机芯使用说明**

**B. 产品功能模式**


- 值是在 00 至 29 之间，分数值则保持不变。
- 在设置“秒”时，若秒数值于 30 至 59 之间，在秒数值回到 00 的同时，分数值亦会增加 1；若秒数值是在 00 至 29 之间，分数值则保持不变。
  - 在设置“分”时，若分数值于 00 至 59 之间，在分数值回到 00 的同时，时数值亦会增加 1；若分数值是在 00 至 59 之间，时数值则保持不变。
  - 在设置“时”时，按 D 键调至“A”或“P”出现时为 12 时制，“H”出现时为 24 时制。
  - 在进入“分”、“月”、“日”、“星期”的调整，在对应元素闪烁时，按 D 键进行调整。
  - 在时钟设置模式下，“秒”闪烁，按 D 键调整“秒”归零；按 C 键“时”闪烁，再按 C 键“分”闪烁，按 D 键调整“分”归零；按 C 键“时”闪烁，按 D 键调整“秒”归零；按 C 键“时”闪烁，按 D 键调整“分”归零。
- 4. 时间设置功能**
- 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
  - D 键进行调整，再按 C 键设置完毕。
  - 闹钟设置：在闹钟模式下，按 C 键“时”闪烁，按 D 键进行调整，再按 C 键“分”闪烁，按 D 键进行调整，再按 C 键设置完毕。
  - 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
- 3. 闹钟及整点报时关闭与开启**
- 闹钟及整点报时关闭与开启：在闹钟模式下，“时”或“分”不闪烁，按 D 键是依次开启/关闭闹钟；及整点报时：( ) 会闪烁，响铃 20 秒后自动停止。
  - 闹钟设置：在闹钟模式下，按 C 键“时”闪烁，按 D 键进行调整，再按 C 键“分”闪烁，按 D 键进行调整，再按 C 键设置完毕。
  - 闹钟响时，按 B 键开启贪睡功能，5 分钟后再次响铃 20 秒；按 C 键/D 键可停止响铃。
- 2. 秒表及分段计时功能**
- 在秒表模式下，按一次 D 键开始执行跑秒，再按一次 D 键跑秒停止，在跑秒停止时按 C 键是跑秒归零。
  - 在秒表模式下，按 D 键开始计时，按 C 键进入分段计时状态，有“SP”符号”) 开始中途测量。之后按 C 键开始计时，即记录第一位选手完成时间，再按 D 键中途测量完毕，记录第二位选手的完成时间，最后按 C 键清除记录。
- 1. 在非设置模式下，按 B 键选择操作模式。任意模式下按 A 或 E 键 EL 亮三秒。**

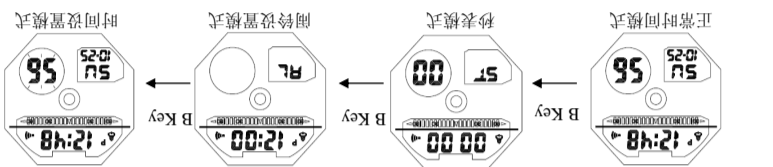

**B. 产品功能模式**


- 12 位计功能，显示时、分、秒、日、月、星期。
- 响铃及整点报时
- 贪睡功能
- 12/24 时制选择，全自动日历。
- 1/100 秒秒表
- EL 背光

**A. 功能简介**

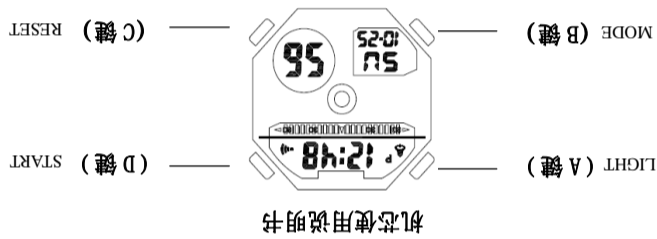


**机芯使用说明**

**Operation Instruction**

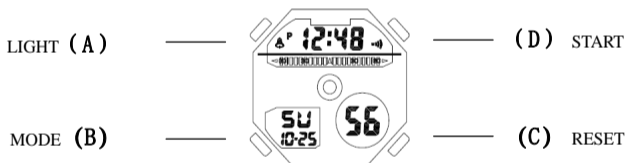


**Operation Instruction**

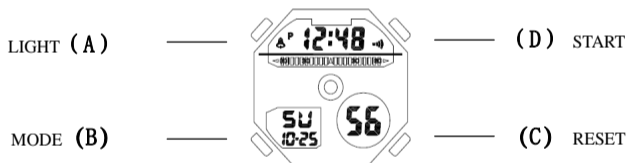

**A. Functions**

- 12-digit display : Hour,minute,second,Date,Month,weekday;
- Daily Alarm and Chime
- Snooze
- 12/24Hour Option, automatical Calendar
- Chronographic
- EL Backlight

**B. Display Modes frequencies:**

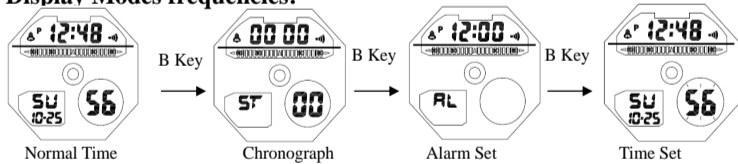

1. In any mode, Push button A, EL will be turned on and lasts 3minutes;

**2. Chronographic and Split:**

- In Time mode, Push Button B 1time into Chronographic mode;
- In Chronographic mode, Push Button D 1time to start stopwatch, push button D again to pause stopwatch, push button C to stop and reset;
- During Stopwatch counting, push button C into Splitting counting model, there's"SP" mark in the display(Stopwatch continue count internally), push button C again back normal Chronographic count mode, press button D again to pause .push button C to reset.

**3. Daily Alarm and Chime:**

- In Time mode, Push Button B twice into Alarm set mode;
- In Alarm Set mode, Push button C into alarm setting and Hour flashing, push C to shift Hour and Minute, push button D to adjust the values,.
- When Hour or Minute doesn't flash, Push button D continually to Turn on or off Alarm and Chime.
- There's ALM or CHM mark when the alarm or Chime is on.
- During alarm rings, press button B turn on the Snooze function, the alarm will ring again in 5minutes, Push button C or D to stop the alarm.


**4. Time setting**

- In time model, push button B 3times into time setting mode;
- In time setting mode, Second flashes, press button D to reset the second, press C button to shift Hour and Hour flashes, same way to shift Minute, Month, Date and Weekday, press button D to adjust the value(Holding the button D the value can be adjusted fast).
- When set the hour, A or P for 12Hour format, H for 24hour format

**A. Functions**

- 12-digit display : Hour,minute,second,Date,Month,weekday;
- Daily Alarm and Chime
- Snooze
- 12/24Hour Option, automatical Calendar
- Chronographic
- EL Backlight

**B. Display Modes frequencies:**

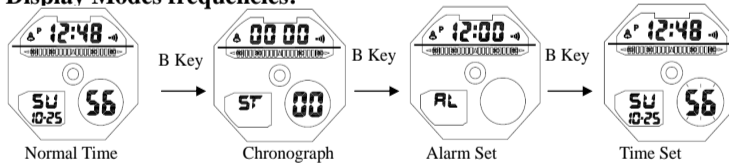

1. In any mode, Push button A, EL will be turned on and lasts 3minutes;

**2. Chronographic and Split:**

- In Time mode, Push Button B 1time into Chronographic mode;
- In Chronographic mode, Push Button D 1time to start stopwatch, push button D again to pause stopwatch, push button C to stop and reset;
- During Stopwatch counting, push button C into Splitting counting model, there's"SP" mark in the display(Stopwatch continue count internally), push button C again back normal Chronographic count mode, press button D again to pause .push button C to reset.

**3. Daily Alarm and Chime:**

- In Time mode, Push Button B twice into Alarm set mode;
- In Alarm Set mode, Push button C into alarm setting and Hour flashing, push C to shift Hour and Minute, push button D to adjust the values,.
- When Hour or Minute doesn't flash, Push button D continually to Turn on or off Alarm and Chime.
- There's ALM or CHM mark when the alarm or Chime is on.
- During alarm rings, press button B turn on the Snooze function, the alarm will ring again in 5minutes, Push button C or D to stop the alarm.

**4. Time setting**

- In time model, push button B 3times into time setting mode;
- In time setting mode, Second flashes, press button D to reset the second, press C button to shift Hour and Hour flashes, same way to shift Minute, Month, Date and Weekday, press button D to adjust the value(Holding the button D the value can be adjusted fast).
- When set the hour, A or P for 12Hour format, H for 24hour format