



EACHINE TX03

Super Mini 5.8GHz 72CH FPV Transmitter
+600TVL FPV Camera+Four leaf antenna

0/25mW/50mW/200mW adjustable



Product Instruction
Manual

PRODUCT SPECIFICATION

- Long-press the button for 5 second until digital display flicker. Then short-press the button to change the power, 25mW/50mW/200mW (one hyphen stands for 25mW, two hyphens stand for 50mW, and three hyphens stand for 200mW).
- 5 seconds after setting, CH, FR and power will flicker alternately.

Notice: The vtx has memory for settings. To change the settings, please repeat steps as above.


Frequency and channel frequency table:

Band	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Band-A	5865	5845	5825	5805	5785	5765	5745	5725
Band-b	5733	5752	5771	5790	5809	5828	5847	5866
Band-E	5705	5685	5665	5645	5885	5905	5925	5945
Band-F	5740	5760	5780	5800	5820	5840	5860	5880
Band-r	5658	5695	5732	5769	5806	5843	5880	5917
Band-U	5325	5348	5366	5384	5402	5420	5438	5456
Band-o	5474	5492	5510	5528	5546	5564	5582	5600
Band-L	5333	5373	5413	5453	5493	5533	5573	5613
Band-H	5653	5693	5733	5773	5813	5853	5893	5933



www.eachine.com

PRODUCT SPECIFICATION

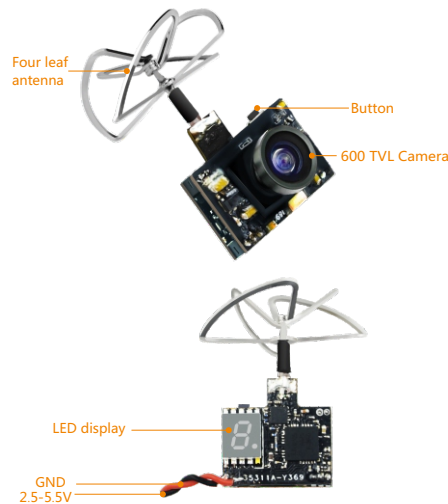

Super Mini 5.8GHz 72CH FPV Transmitter
+600TVL FPV Camera+Four leaf antenna

PRODUCT SPECIFICATION

Specification and Parameters:

- Output power:0/25mW/50mW/200mW adjustable (Set output power on 0, to avoid frequency interference)
- Input power: 2.5-5.5V
- Current consumption: 250mA-510mA(25mW)
270mA-640mA(50mW)
330mA-740mA(200mW)
- Camera resolution: 600TVL
- Video system:NTSC
- Mini illumination: 1 lux
- Field of view: 120° FOV 150°DFOV
- Antenna dimensions: 22mm X 29mm diameter
- Antenna: 4 lobe right hand circular polarized
- Frequency: 5.8GHz 9 bands 72 channels, with Raceband: 5325-5945 MHZ
- Size: 20.66*14.06mm(L*W)
- Weight: 5g

Operation Instruction:

- Powering on the vtx, blue LED display 0, indicating the vtx is powered on, but it is in off status without any transmission.
- Short-press the button to change channel (CH), digital display will change synchronously. Digital display changes cyclically from 1 to 8.
- Long-press the button for 2 seconds until digital display flicker. Then short-press the button to change the frequency band (FR), digital display will change synchronously. Digital display changes cyclically from A、b、E、F、r、U、o、L、H.

尺寸：126*93mm

材料：128g双铜