

**PRODUCT SPECIFICATION**

- C: Short press the button to change CH from 1 to 8.
- D: Press and hold the button for 2s when letter flicker, then short press to change band from A to H.
- E: Press and hold the button for 4s when digit flicker twice quickly, then short press the button to change power level from 1 to 6.

**Frequency and channel frequency table:**

| Band   | CH1  | CH2  | CH3  | CH4  | CH5  | CH6  | CH7  | CH8  |
|--------|------|------|------|------|------|------|------|------|
| Band-A | 5865 | 5845 | 5825 | 5805 | 5785 | 5765 | 5745 | 5725 |
| Band-b | 5733 | 5752 | 5771 | 5790 | 5809 | 5828 | 5847 | 5866 |
| Band-E | 5705 | 5685 | 5665 | 5645 | 5885 | 5905 | 5925 | 5945 |
| Band-F | 5740 | 5760 | 5780 | 5800 | 5820 | 5840 | 5860 | 5880 |
| Band-r | 5658 | 5695 | 5732 | 5769 | 5806 | 5843 | 5880 | 5917 |
| Band-U | 5325 | 5348 | 5366 | 5384 | 5402 | 5420 | 5438 | 5456 |
| Band-o | 5474 | 5492 | 5510 | 5528 | 5546 | 5564 | 5582 | 5600 |
| Band-L | 5333 | 5373 | 5413 | 5453 | 5493 | 5533 | 5573 | 5613 |
| Band-H | 5653 | 5693 | 5733 | 5773 | 5813 | 5853 | 5893 | 5933 |



[www.eachine.com](http://www.eachine.com)



# EACHINE TX05


**Super Mini 5.8GHz 72CH FPV Transmitter + 600TVL FPV Camera + Dipole antenna**

**0.01mW/5mW/25mW/50mW  
100mW/250mW adjustable**



**Product Instruction Manual**

**PRODUCT SPECIFICATION**

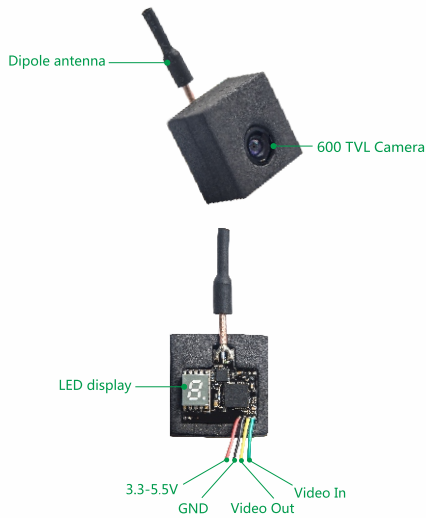

Super Mini 5.8GHz 72CH FPV Transmitter + 600TVL FPV Camera + Dipole antenna

**PRODUCT SPECIFICATION**

**Specification and Parameters:**

- Frequency: 5.8GHz/72CH
- Bands: A,b,E,F,r,U,o,L,H
- Channels: 1,2,3,4,5,6,7,8
- Power: 0.01mW, 5mW,25mW,50mW,100mW,250mW
- Range: 400m
- Operating voltage: 3.3V-5.5V
- Operating current: 150mA-800mA
- Resolution: 600TVL M7 lens
- Field of view: 120°FOV
- Video format: NSTC
- Size: 19.6\*14mm (L\*W)
- Weight: 4.9g

**Operation Instruction:**

**1: Power level introduction**

- A, 0.01Mw: LED display "1" and flicker twice.
- B, 5mW: LED display "2" and flicker twice.
- C, 25mW: LED display "3" and flicker twice.
- D, 50mW: LED display "4" and flicker twice.
- E, 100mW: LED display "5" and flicker twice.
- F, 250mW: LED display "6" and flicker twice.

The default power is 0.01mW. Setting will restore to very last band, channel and power level if no operation act within 5 second.

**2: Configure CH, band and Power level**

- A: Letters stand for bands, digits stand for CHs, digits flicker twice quickly stands for power level.
- B: The default power is 1(0.01mW). Setting will restore to very last band, channel and power level if no operation act within 5 second.

尺寸 : 126\*93mm  
材料 : 128g双铜